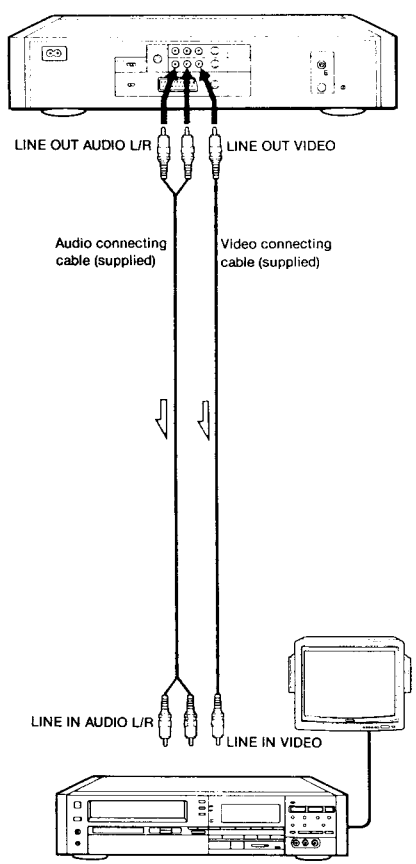

(2) Editing a Tape to Another VTR

Connection

- Make connections referring to the illustration.
- If the other VTR is equipped with an S VIDEO input connector, make the connection.
- If the other VTR is a monaural type, make connections with the optional RK-C71 audio connecting cable.

Preparation

On this VTR = player

- Set AUDIO MONITOR to the appropriate position referring to "Selecting the Monitor Sound" page 36.
- Activate the EDIT mode.

On the other VTR = recorder

- Select the line input that the player is connected to.
- Activate the EDIT mode if it is equipped

Operation

1 **Turn on the power to both units.**

2 **Insert a source tape into the player. Insert a tape for recording into the recorder.**

3 **Playback with the player and record with the recorder.**

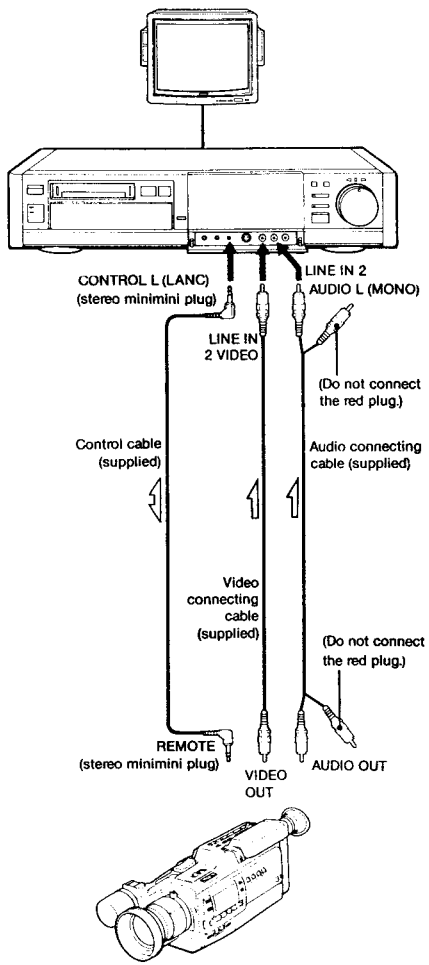
CONTROL L (LANC) (stereo minimini plug)
LINE IN 2 AUDIO L (MONO)
LINE IN 2 VIDEO
(Do not connect the red plug.)
Control cable (supplied)
Audio connecting cable (supplied)
Video connecting cable (supplied)
(Do not connect the red plug.)
REMOTE (stereo minimini plug)
VIDEO OUT
AUDIO OUT

(1) Editing a Tape from a 8 mm Camera Recorder

Connection

- Make connections referring to the illustration.
- If the camera recorder is equipped with an S VIDEO output connector, make the connection.
- If the other VTR is a monaural type, connect the white plug to the other VTR's audio output jack and the white plug on the other end to the LINE IN 2 AUDIO L (MONO) jack of this VTR.

Preparation

On the other VTR = player

- Activate the EDIT mode if it is available
- Select LANC MODE S or the equivalent if selection is available.

On this VTR = recorder

- Select LANC MODE M in the MODE SET menu (page 30).
- Select the recording mode SP or LP with REC MODE.
- Adjust the recording level with REC LEVEL (page 52).
- Check the other VTR and select SHUTTLE MODE A or B in the MODE SET menu (page 30).

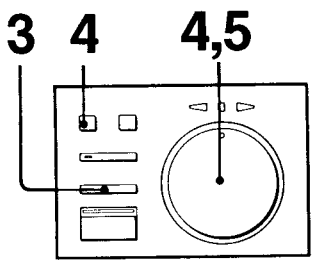

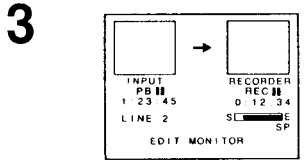

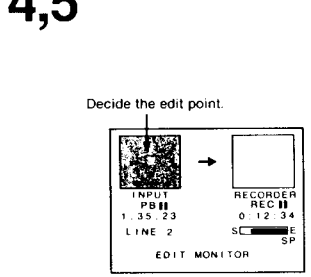

Operation

1 **Turn on the power to both units.**

2 **Insert a source tape into the player. Insert a tape for recording into the recorder.**

3 **Press EDIT STANDBY on the recorder.**
The EDIT MONITOR screen will be displayed.
LINE IN 2 will automatically be selected for the player.
The PLAYER control button will be turned on.
The recorder enters the recording pause mode.
The player enters the playback pause mode.

4 **Check that the PLAYER control button is turned on and turn the EDIT SHUTTLE to locate the start point of the player.**
The available playback speeds are: REVIEW, PB ▮▮ (when EDIT SHUTTLE is released), × 1/5 (slow forward), PB (normal speed forward), and CUE.

Note
× 1/5 speed playback on the other VTR is controllable if × 1/5 speed playback is available on the other VTR.

5 **Release the EDIT SHUTTLE when the desired point is found.**
The player enters the playback pause mode.

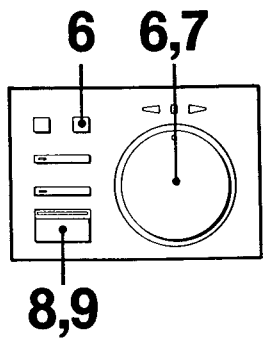

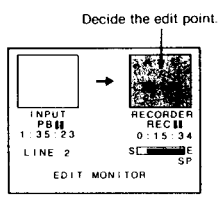

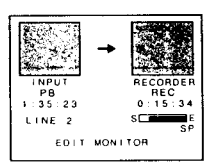

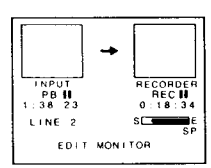

6 **Press RECORDER control button to turn it on and turn the EDIT SHUTTLE to locate the start point of the recorder.**
The available playback speeds are: REVIEW, – × 1 (normal speed reverse), REC ▮▮ (when the EDIT SHUTTLE is released), × 1/5 (slow forward), × 1 (normal speed forward), and CUE

7 **Release the EDIT SHUTTLE when the desired point is found.**
The recorder enters the recording pause mode.

8 **Press SYNCHRO EDIT.**
The player will start playback and the recorder starts recording.

9 **Press SYNCHRO EDIT at the edit end point.**
The player will enter the playback pause mode and the recorder enters the recording pause mode.

To edit more scenes
Repeat steps **4** to **9**.

When editing is completed
Press EDIT STANDBY. Both units will stop and the EDIT MONITOR display will return to the TV programme screen.

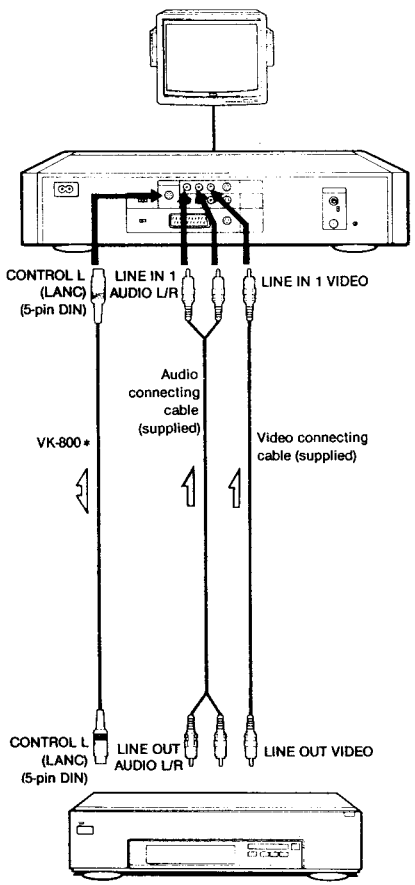

(2) Editing a Tape from a 8 mm or VHS VTR

Connection

- Make connections referring to the illustration.
- If the other VTR is equipped with an S VIDEO output connector, make the connection.
- If the player is a monaural type, make connections with the optional RK-C71 audio connecting cable.

Preparation

On the other VTR = player

- Activate the EDIT mode if it is available.
- Select LANC MODE S or the equivalent if selection is available.

On this VTR = recorder

- Select LANC MODE M in the MODE SET menu (page 30).
- Select the recording mode SP or LP with REC MODE.
- Adjust the recording level with REC LEVEL (page 52).
- Check the other VTR and select SHUTTLE MODE A or B in the MODE SET menu (page 30).

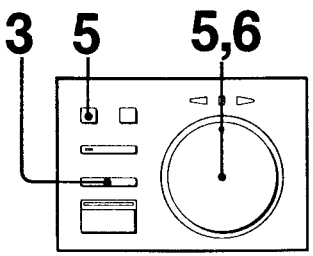

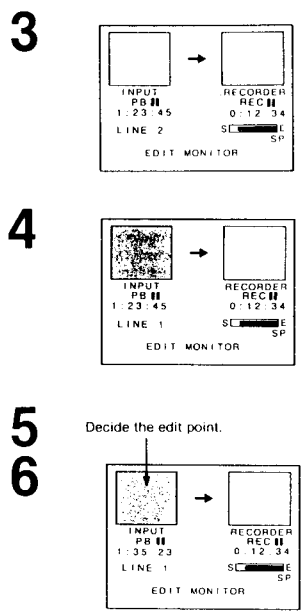

Operation

1 **Turn on the power to both units.**

2 **Insert a source tape into the player. Insert a tape for recording into the recorder.**

3 **Press EDIT STANDBY on the recorder.**
The EDIT MONITOR screen will be displayed.
The PLAYER control button will be turned on.
The recorder enters the recording pause mode.
The player enters the playback pause mode.

4 **Press INPUT SELECT to change the input source display from LINE 2 to LINE 1.**

5 **Check that the PLAYER control button is turned on and turn the EDIT SHUTTLE to locate the start point of the player.**
The available playback speeds are: REVIEW, PB ▮▮ (when EDIT SHUTTLE is released), × 1/5 (slow forward), PB (normal speed forward), and CUE.

Note
× 1/5 speed playback on the other VTR is controllable if × 1/5 speed playback is available on the other VTR.

6 **Release the EDIT SHUTTLE when the desired point is found.**
The player enters the playback pause mode.